

CHAIR ADJUSTMENTS FOR 3150/52 HIGH BACK CHAIR

Recline Lock

Push button on paddle lever on right hand side to unlock recline. Recline to desired position. Press and release again to relock.

Chair Height Adjustable

Twist paddle lever on right hand side of chair to raise and lower cylinder height.

Recline Resistance

Twist lever behind height adjustable paddle clockwise to increase tension. Counter clockwise reduces recline resistance.



Seat Slide

Twist paddle on left side to adjust seat pan forward or backward. The push button locks the seat from swinging forward.

Articulating Headrest

Lift headrest up to raise. 6 locking positions available. To lower, lift headrest to highest position, then lower.



Neck Roll



Headrest Position



Fold Backward if Not Using

CHAIR ADJUSTMENTS FOR 3150/52 HIGH BACK CHAIR

Armrest Height

Squeeze lever on the arm to adjust height up or down



Swing Arm Adjustment

Push up and hold button on bottom of arm
Swing backward.



Slide Pads

Move forward, back, left or right

Arm Width

Loosen knob on underside of chair
Adjust to desired position
Tighten knob



Lumbar Support

Squeeze bulb to inflate lumbar support.
Open metal valve by turning counter clockwise to deflate the lumbar support.
Close valve by turning clockwise.

Enjoy your chair with confidence. It is a quality product backed by a great warranty. It is not necessary to register your chair for warranty. We did that for you at the time of shipment.